


# THE YELLOWJACKET

Drain Inlet Filter

now with removable  
foam backer for  
curb openings

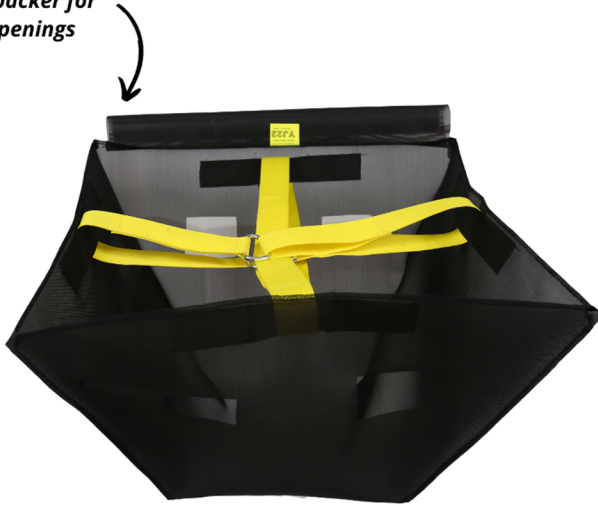

# YJ33

available sizes: 2' x 2' | 2' x 3' | 2' x 4' | 3' x 3' | 3' x 4'  
custom sizes available



SALES@PSIENVIRO.COM | (800) 808-1774 | WWW.PSIENVIRO.COM

## YELLOWJACKET INSTALLATION INSTRUCTIONS



**1.** Remove the YJ from the package. On a flat surface adjacent to the drain, remove the grate and place it on top of the YJ (with straps facing up). Ensure all four of the filter edges are visible around the edges of the grate.



**2.** Using the straps, lift the grate and place it back in the storm drain with the YJ underneath. If there is a curb inlet, make sure the foam backer is on the side of the curb inlet. Remove the foam backer if there is no curb inlet.



**3.** Once in place, take the carabiner from one of the high visibility straps and pull it through the loop at the other end of that same strap.



**4.** Pull the carabiner side through until the strap is tight and attach the carabiner to the grate. Repeat steps 3 and 4 for the other high visibility strap.



sales@psienviro.com | (800) 808-1774  
www.psenviro.com



**Alternate Steps 3 & 4.** Once the filter is put in place, take a carabiner from one one strap and attach it to the loop on the other end of that same strap. Repeat for the other strap.

instructions apply to yellowjacket sizes 2'x2' and 3'x3'